

If it is weak to heat, you can put it later!


A through hole is changed to a socket!

**Mr.Socket**


AF series

[Can be used by a chip mounter]

Parts can be fit without soldering.

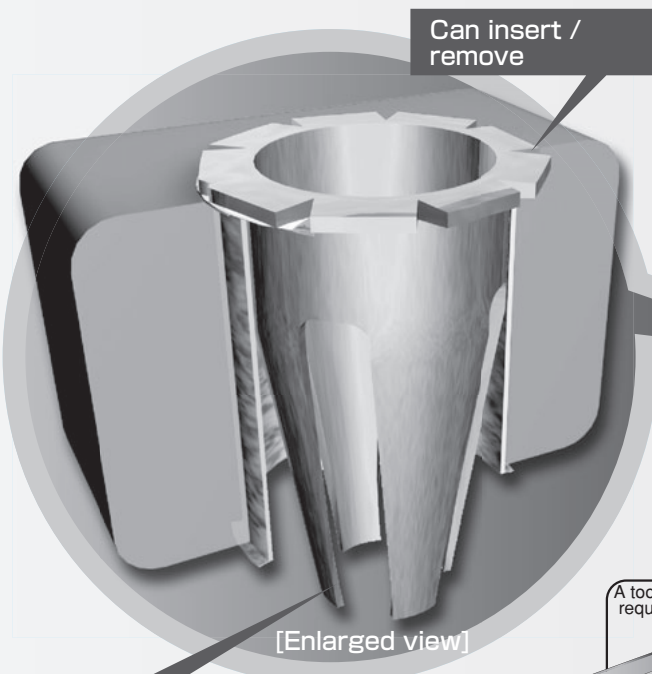

Can be used for a chip mounter

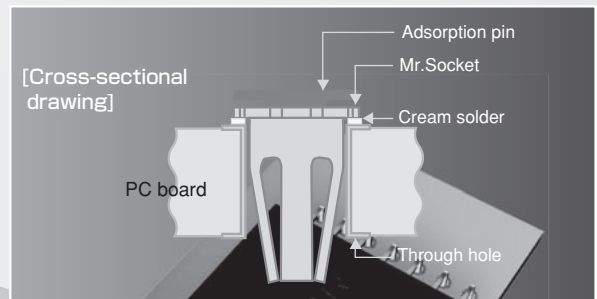

A part which is weak to heat can be put on the PC board later!

A through hole can be changed to a socket. It can be inserted / removed.




A tool in response to many requests is now available!  
Tool for pulling out adsorption pin for AF series  
Model: AF-JIG




Automatic mounting by a chip mounter



Soldering by reflow

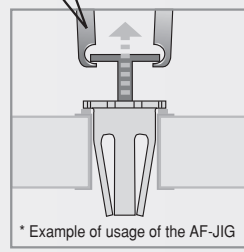

Remove the adsorption pin. (Push from the back side and remove vertically.)

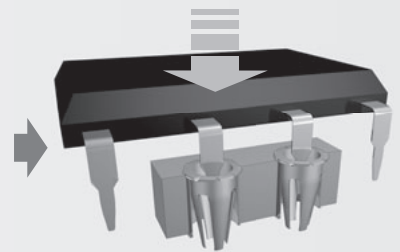

A through hole changes to a socket.

Socket pin